

SERVICE MANUAL / PARTS LIST

BLADDER FILL SYSTEM MODEL #112909



CONTENT:

PAGE

- 1 Container Fill Instructions
- 2 Fill Instruction
- 3 Bleed Air Instructions
- 4-5 Bladder Fill Assembly

425 Hazel St. Kelso WA 98626 (800) 248-6079 Fax (360) 578-9934

CONTAINER FILL INSTRUCTIONS

- 1. Lift the Plug Lever to release pressure in the container.
- 2. After pressure is released, point the lever straight up and pull upward to release the plug from the container.
- 3. Refill the container.
- 4. Replace the plug and lock lever down.





FILL INSTRUCTIONS

- 1. Press the selector Valve up.
- 2. Pump 3 to 4 times to pressurize cylinder.
- 3. Bleed the air from hose:
 - 3.1. Turn the Lever to the on Position
 - 3.2. Depress the valve stem
 - 3.3. Allow the fluid to flow until there are no air bubbles
- 3.4. Return the Lever to the off Position
- 4. Install hose connector on fill valve.
- 5. Pump to pressurize cylinder.

LEVER OFF ·

- 6. Turn the Lever to the on Position.
- 7. Return the lever to the off Position when 6 PSI is reached.

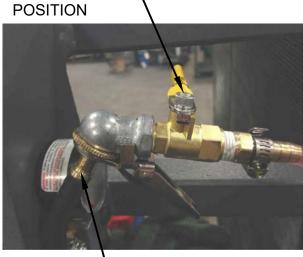

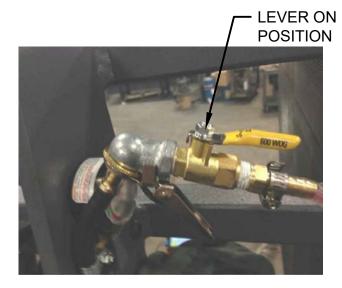




BLEED AIR INSTRUCTIONS

- 1. If you suspect air is in the system use the supplied air bleed hose to bleed out the air by connecting it to the bleed connection fitting.
- 2. Refill to 6 PSI. By following the water fill instructions

Note: Bleed hose design may vary.

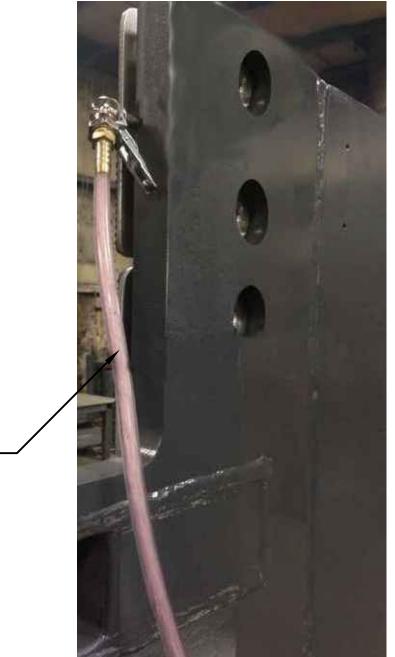




BLADDER FILL ASSEMBLY - 1

Drawing Reference: 112909		
#	QTY	PART #
1	1	112740
2	2	112910
3	1	112045
4	1	112044
5	72.00"	112911
6	1	112912
7	1	112927
8	1	112926

DESCRIPTION

Fluid Pump
Hose Clamps $\frac{1}{32}$ " - $\frac{5}{8}$ "
Locking Head Chuck
Brass Barbed ¹ / ₄ " Male Fitting
Hose $\frac{1}{4}$ " ID $\frac{3}{8}$ " OD $\frac{1}{16}$ " Wall
Nylon Connector Tube
Ball Valve
Bleed Hose Assembly

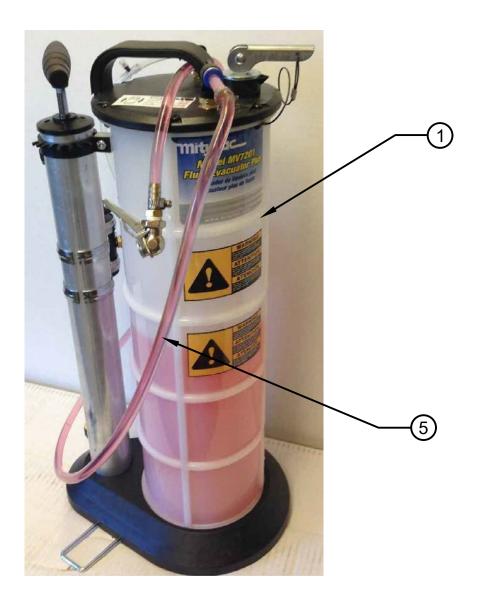

BLADDER FILL ASSEMBLY - 2

Drawing Reference: 112909

